

Warranty and maintenance conditions



1

VEHICLE MAINTENANCE. WARRANTY CONDITIONS

1.1 Vehicle maintenance

This is our goal: for you to be satisfied with your vehicle.

In this maintenance manual you will find information on essential checks and adjustments to your vehicle and, in the Network of Official Service Centres, the list of workshops approved by LeciTrailer.

We insist on the need to carry out a free first check after 5,000 km in order to avoid possible later breakdowns and the warranty ceasing to be valid.

Performing maintenance work at specified intervals is essential in order to ensure the optimum operation of our vehicles, to enjoy the guarantees offered by each of the parts that compose it and to conserve the value of your vehicle.

These periods have been obtained from a normal use of a road vehicle, so that the intervals are reduced in case of use in severe conditions.

A visual inspection is also recommended before embarking on a long journey or when a malfunction is detected.

If spare parts are fitted it is advisable to only use original parts from the manufacturer of the affected part. The warranty expires in the warranty period when non-approved parts are used.

It is highly recommended that maintenance work on a LeciTrailer vehicle be carried out at our own Assistance Facilities or, where appropriate, at a workshop in the LeciTrailer Official Services Network, this being essential in the warranty period.

A workshop that has the necessary knowledge, possesses the necessary tools and follows the manufacturer's guidelines avoids endangering your safety and that of others.

Wherever you are, our Customer Service Department and our Assistance Facilities can provide you with information and help.

Every new vehicle in the LeciTrailer range is guaranteed against any manufacturing defect for one year from the date of sale.

Enforcement of the warranty can be requested from any of the LeciTrailer Network member workshops.

The warranty covers the materials and workmanship necessary to repair or replace items or parts considered to be original defects, at the discretion of the authorised workshop.

Presentation of this certificate and the conformity of the Warranty Department at LeciTrailer, S.A. will be required whenever an operation is requested under warranty.

Axle manufacturers' maintenance manuals and the LeciTrailer user manual specify, together with the warranty conditions, all the essential checks and adjustments. Non-compliance with these manuals will result in the warranty being invalidated.

LeciTrailer, S.A.

1.2 Warranty conditions

- If the first check is not carried out after 5,000 km or two months of work, the warranty does not cover breakdowns related to:
 - Axle alignment.
 - Abnormal brake component wear.
 - Abnormal wheel wear.
 - Permanent deformations in the platform.
- Warranty work must be carried out by authorised LeciTrailer network garages.
- Parts subject to a warranty claim must be sent to the factory for examination.
- Warranties for components included in the chassis (axles, suspensions, lift axles, pistons, etc.) not manufactured by LeciTrailer are subject to the manufacturer's warranty conditions.
- The warranty does not cover breakdowns due to: negligence, inexperience of the driver, faulty use, failure to comply with specified maintenance or maintenance not carried out within the time limits indicated, overloading, subjecting the vehicle to inappropriate stress or wear and tear.
- Neither does it cover faults occurring in parts where adjustments made by the user can be appreciated, or the existence of original parts replaced by others that have not been approved by LeciTrailer, when the fault is related to these parts.
- Also excluded from the warranty are the costs of towing, compensation for downtime, the contents of the load, tyres, brake pads, damage caused by knocks, as well as routine checks, tests and adjustments.
- The buyer will only submit to the terms in which the vehicle is guaranteed and which are stated above.

Obligatory and free service

The workshop will cut out and fill in the coupon that appears with the Warranty Certificate.

Date	Km.	Workshop

1. TYRES

- Tightening torque wheels 600 Nm
- Check regular tyre wear
- Tyre pressure 9 bar
- Check axle alignment

Remarks:

.....

.....

2. AXLES (only the corresponding brake)

[Disc brake]

- Check pad - disc clearance 0,7 mm
- Chamber and actuators torque 180 Nm

[Drum brake]

- Check automatic levers

Remarks:

.....

.....

3. SUSPENSION

- Tightening torque U bolts (650 Nm)
- Tightening torque shock absorbers M24 (420 Nm)
- Tightening torque leaf spring bolt (900 Nm)
- Tightening torque rocker arm bolt (1100 Nm)
- Tightening torque drawbar bolt (70 Nm)

Remarks:

.....

.....

4. INSTALLATIONS

- Check electrical system function
- Check brake system efficiency
- Bleed pressure tanks
- Check suspension valve function
- Check ABS function

Remarks:

.....

.....

5. STRUCTURE

- Visual check of structure

6. GENERAL COMMENTS

.....

.....

.....

AUTHORISED WORKSHOP STAMP

Dear Customer, you must ask the workshop to stamp this receipt, as a necessary requirement for the warranty conditions



LeciTrailer

C° de los Huertos, s/n - Apdo. 100
50620 CASETAS (Zaragoza)
Tel. +34 976 462 929
Fax +34 976 773 914

Pol. Ind. "Rompecubas"
Autovía A-4, km. 29,5
C/ Miguel Servet, 20
28340 VALDEMORO (Madrid)
Tel. +34 918 085 500
Fax +34 918 752 060

Pol. Ind. "Sant Ermengol"
C/ Progrés, 24
08630 ABRERA (Barcelona)
Tel. +34 937 704 786
Fax +34 937 703 371

Pol. Ind. "La Isla"
Autovía A-4
C/ Río Viejo, 19-20
41700 DOS HERMANAS (Sevilla)
Tel. +34 954 930 680
Fax +34 954 930 684

Pol. Ind. "Moncada III"
C/ Quinsá, 4
46113 MONCADA (Valencia)
Tel. +34 961 399 800
Fax +34 961 399 852

Service Center Lecitrailer Lyon

20, rue du Brisson
Zac des Chesnes Nord
38290 SATOLAS ET BONCE (France)
Tel: +33 (0)4 74 94 21 09



Scan this code and locate your
nearest official service

If you have a breakdown on the road, we advise you to contact:

Customer Service Department
Working hours from Monday to Friday (8 a.m. to 8 p.m.)
and Saturdays (8 a.m. to 1 p.m.)
Tel: +34 976 462 121 / +34 976 462 929
where you will be informed of the nearest workshop.